



INSTALLATION AND OPERATION MANUAL

CE-SETUP

IP CAMERA SETUP AND POE TESTER

Important Safety Warning:

- Read and keep these directions
- Heed all warnings
- Follow all instructions
- Do not use this apparatus near water
- Clean only with a dry cloth
- Install in accordance with the manufacturer's instructions
- This installation should be made by a qualified service person and should conform to all local codes
- See further safety instructions on page 3

The CE-SETUP provides a simple way to setup and focus PoE-powered IP cameras and is an ideal tool for installers working with both CCTV and IT PoE-based systems. The CE-SETUP is compatible with IEEE.802.3af and IEE.802.3at standards up to 30 W

See Figures 1 – 3 for complete installation details.

FIGURE 1 – CE-SETUP


 


FIGURE 2 – CE-SETUP SIDES

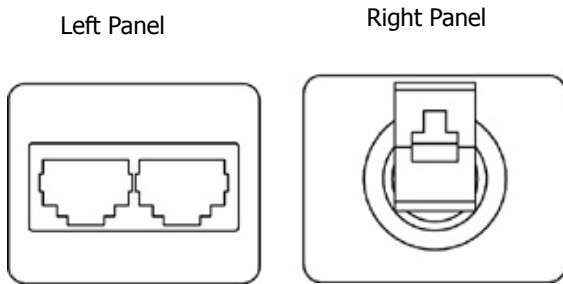

Directions for the CE-SETUP IP camera Setup and PoE Tester

Refer to Figure 3


- Disconnect the network cable.
- Connect pigtail cable to the camera.
- Connect network cable to "Network" connector.
- After the camera power is ON, the CE-SETUP will display the PoE voltage applied to the camera.
- Open your browser or viewing software to view the camera image for adjustment.

FIGURE 3 – CE-SETUP CONNECTIONS



MECHANICAL INSTALLATION INSTRUCTIONS

- Read and keep these directions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- To reduce the risk of fire or electrical shock, do not expose these products to rain, moisture, dripping or splashing.
- No objects filled with liquids, such as vases, shall be placed on the equipment.
- DO NOT install the unit in a place where the operating ambient temperature exceeds 75°C.
- Make sure that the external power supply output voltage is in the recommended range.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including DVRs) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at the power source, convenience receptacles and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when a power supply cord or plug is damaged, liquid has been spilled, objects have fallen inside the apparatus, the apparatus has been exposed to rain or moisture, do not operate normally or has been dropped.

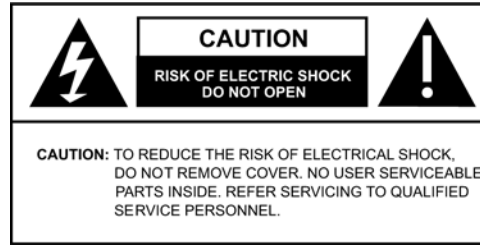

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. This apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.



89 ARKAY DRIVE | HAUPPAUGE, NY 11788 | USA
T: 631.952.2288 | F: 631.951.2288 | TOLL FREE: 800.645.9116
WEB: www.vicon-security.com
UK: +44 (0)1489 566300

MADE IN THE
USA